


Overdrive Shim Kit

Part No.

12783-01K

- Primary Washer
- Shims (3)

Chrysler 42RE, 42RH, 46RE, 46RH, 47RE, 47RH, 48RE

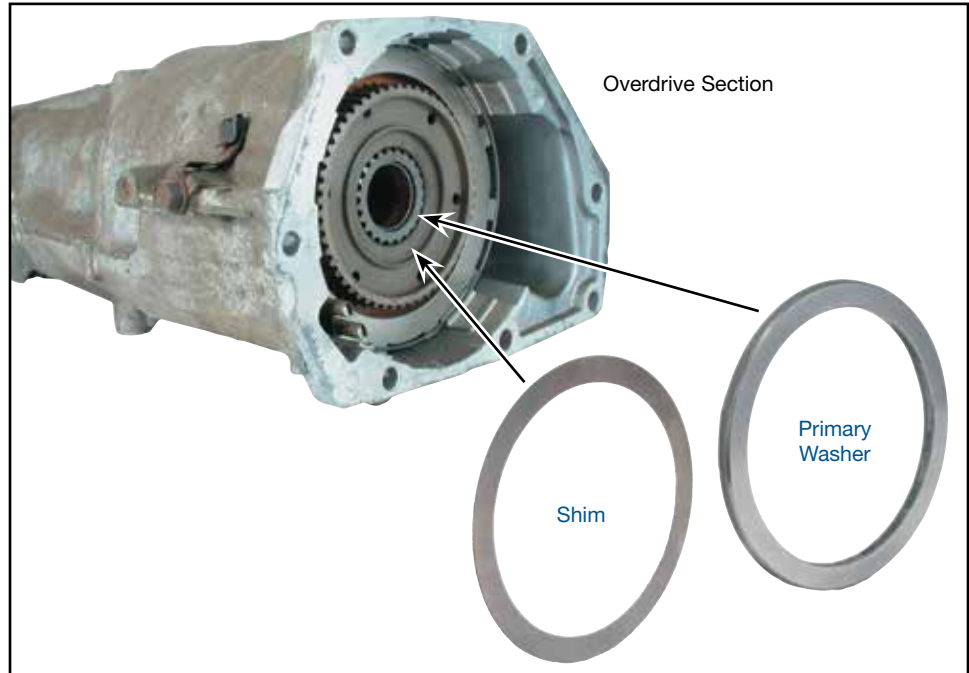

Installation & Assembly

1. Combine .175" thick primary washer with the necessary number of .010" shims to equal the thickness needed for desired overdrive end clearance.
2. Place .010" thick shims onto the piston first, and then the .175" thick washer.
3. Hold shims in place with assembly lube.